

58mm Printer Driver Installation Instruction


1) Install the driver in windowsXP and above, double click "58mmPrinterSetup.exe", click the "OK" button:




2) Enter the driver installation wizard, click the "Next" button:



3) Select the installation path, click the "Next" button:

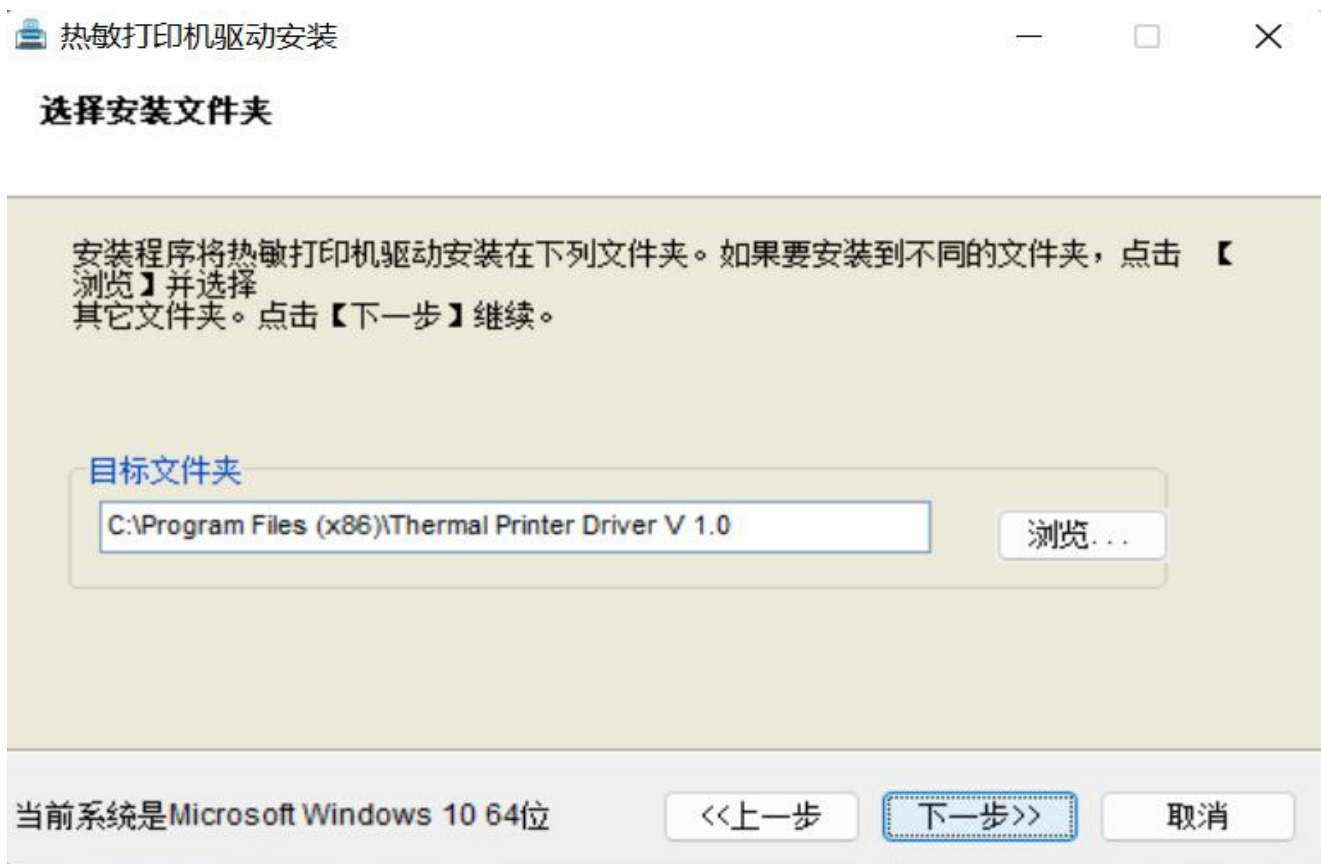

4) Select the corresponding printer model and printer port, click the "Next" button:

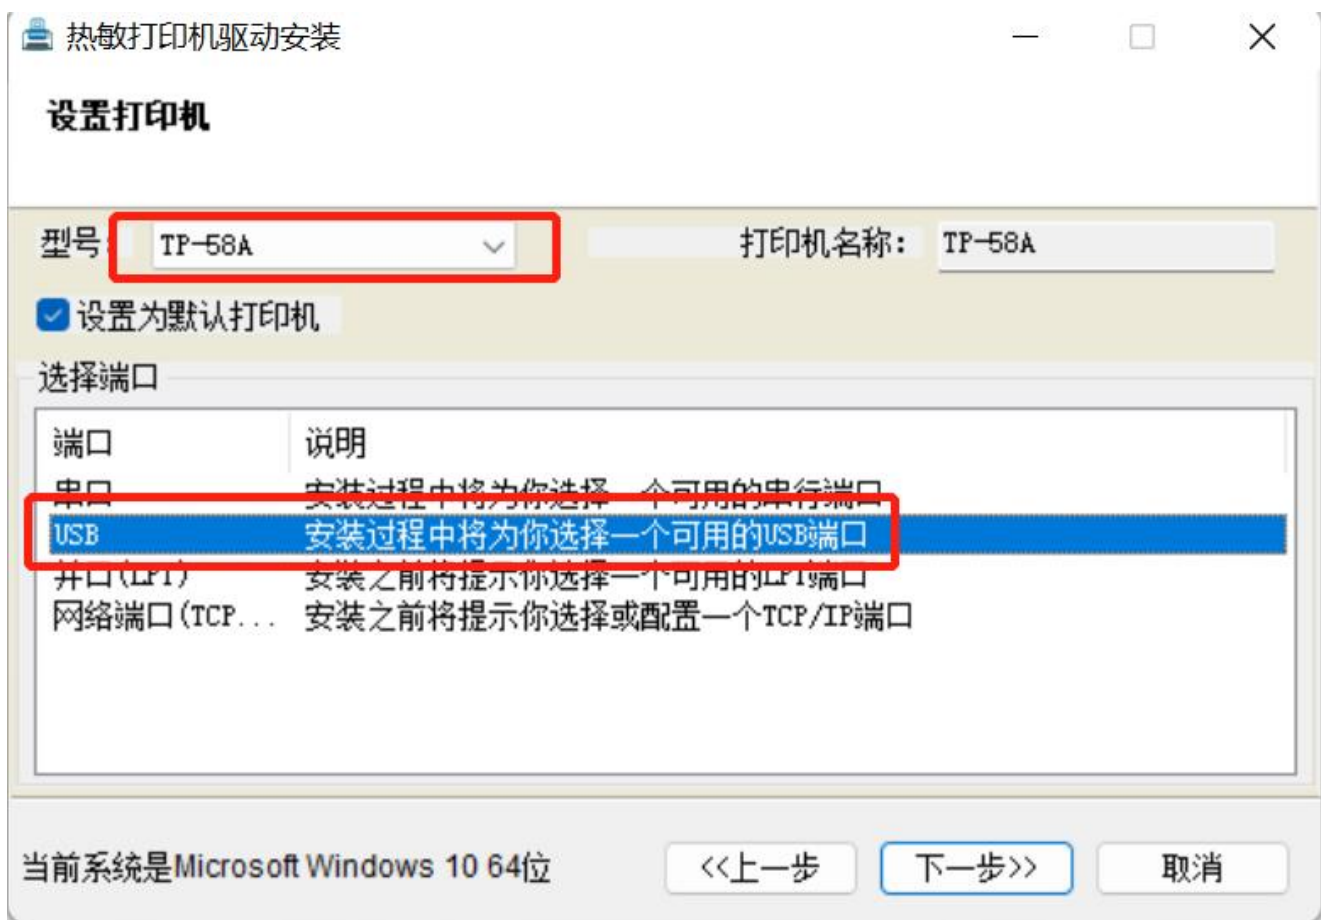

5) Click the "Finish" button, the printer driver installed successfully:

安装完成

热敏打印机驱动已成功安装到您的电脑。

关闭窗口请点击【完成】

当前系统是Microsoft Windows 10 64位

完成